Recommended installation for hose lines

A Hose lines should always be unrolled and not pulled.




B Always ensure that the length of the hose lines is correct for the installation; they must not be too short (observe the bending radius).



C To avoid bending the hose lines, pipe bends should be installed as deflectors.



D Install hose lines without twisting them; they must not be twisted.

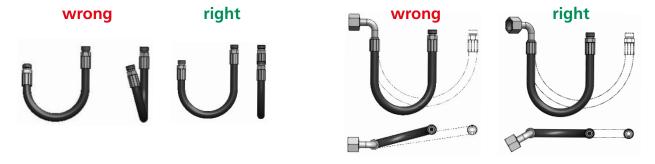

E Hose lines must not be kinked. If this is unavoidable, a hose saddle or kink protector should be used.



This is a service provided by the VTH specialist group 'Hose and Fitting Technology'. These non-binding installation recommendations for hose lines are intended as a guide only. They do not claim to be exhaustive and are the sole responsibility of the operator.